




**Spacers mounting recommendation.**

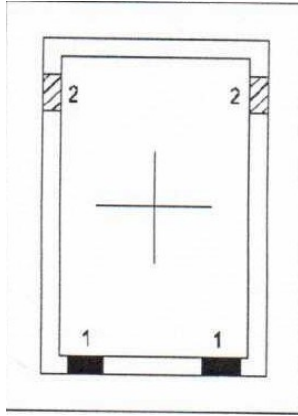


Fixed glazing .

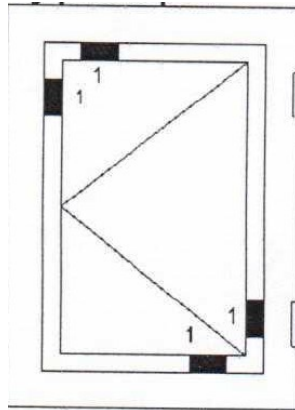


Pivot sash.

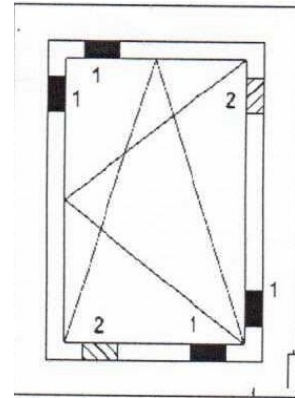


Tilt-and-turn.

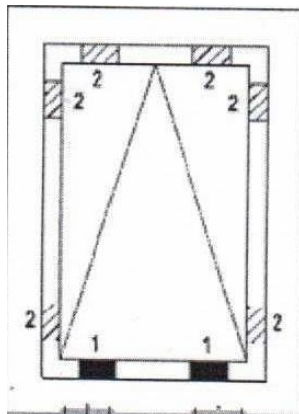


Upward opening.

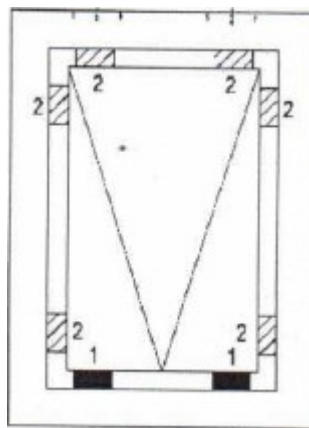


Top-hung sash.

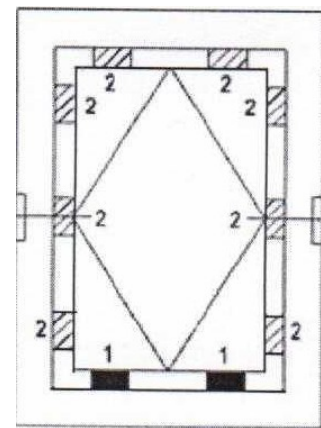

Mid-hung sash.

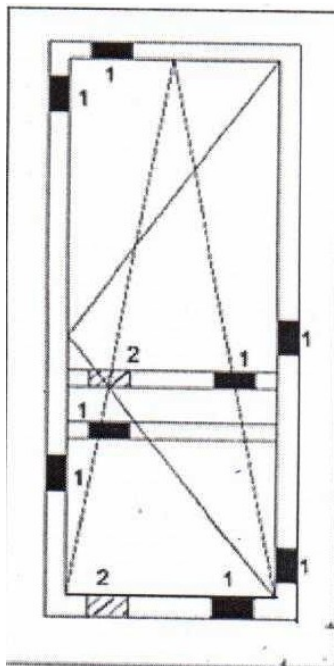


Tilt-and-turn door.

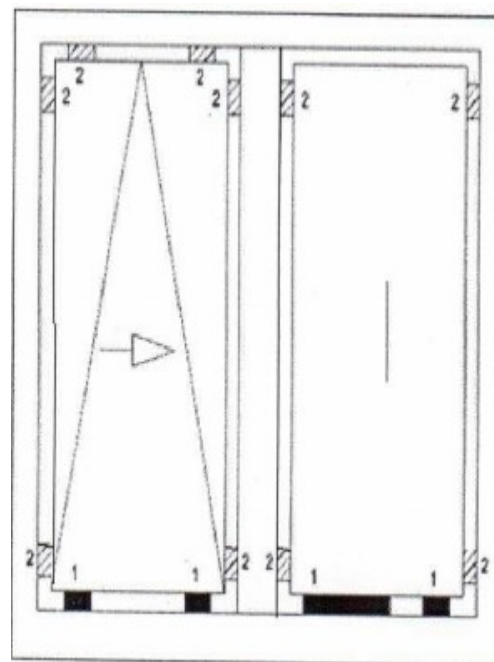


Lift-slide, parallel slide lift door.

**1 = carrier block**  
**2 = spacer**


## Spacers mounting recommendation

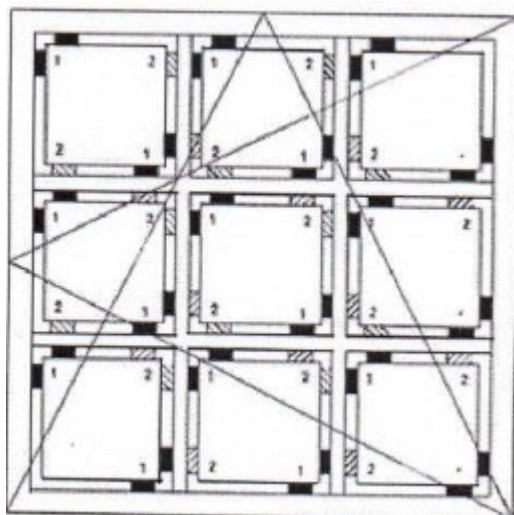


Tilt-and-turn window.

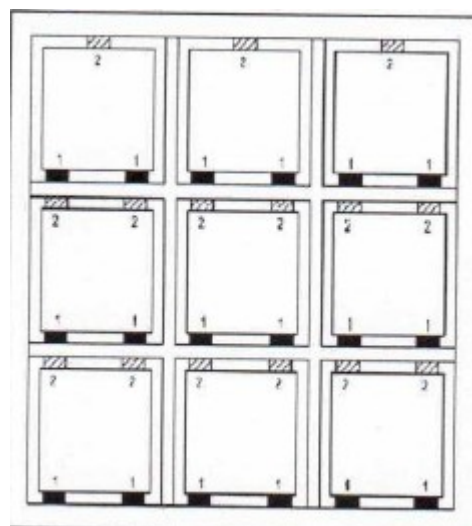


Fixed glazing.

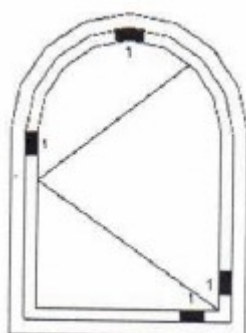


Semicircular arch.

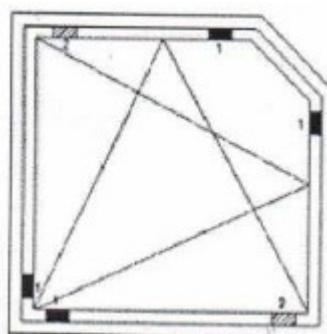


Tilt-and-turn window with diagonal.

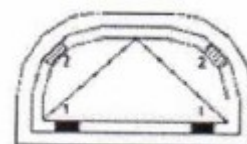


Segmental arch

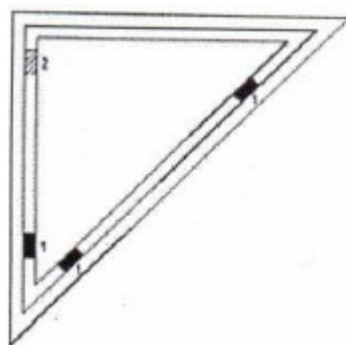

Diagonal window,  
fixed glazing.

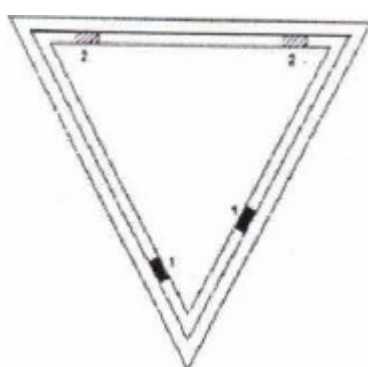

fixed glazing.

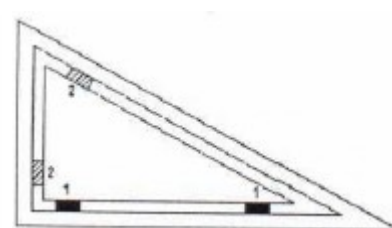

Diagonal window,


Diagonal window,  
fixed glazing.



1 = carrier block  
2 = spacer

Manufacturer reserves the right to make technical changes.

### Application 1 (extension)

#### Arrangement of spacers for door fillings

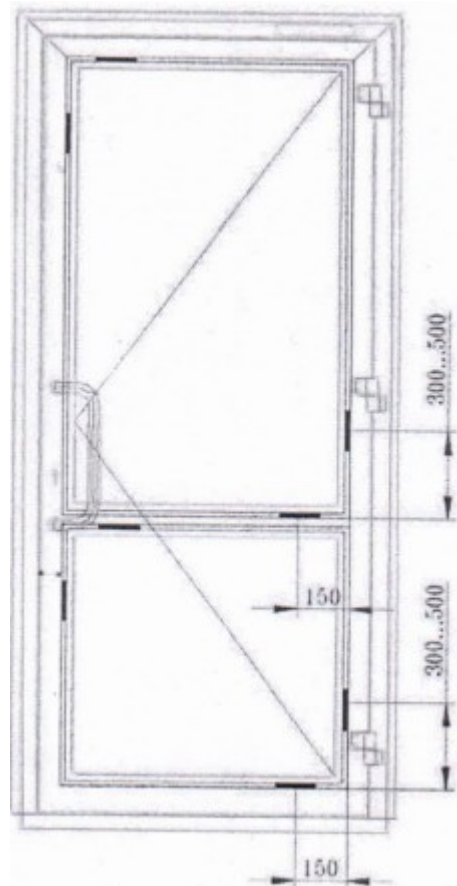

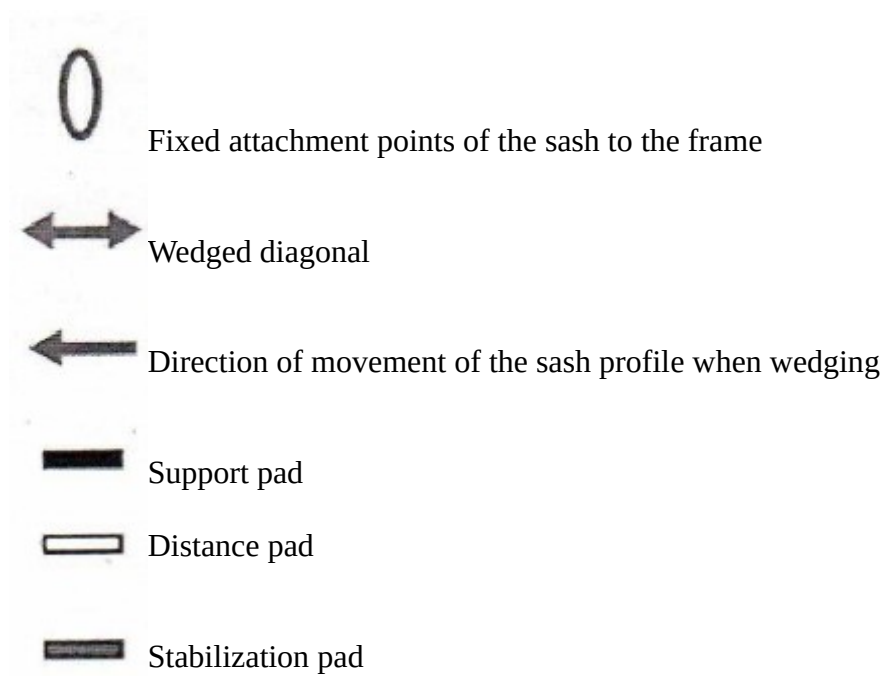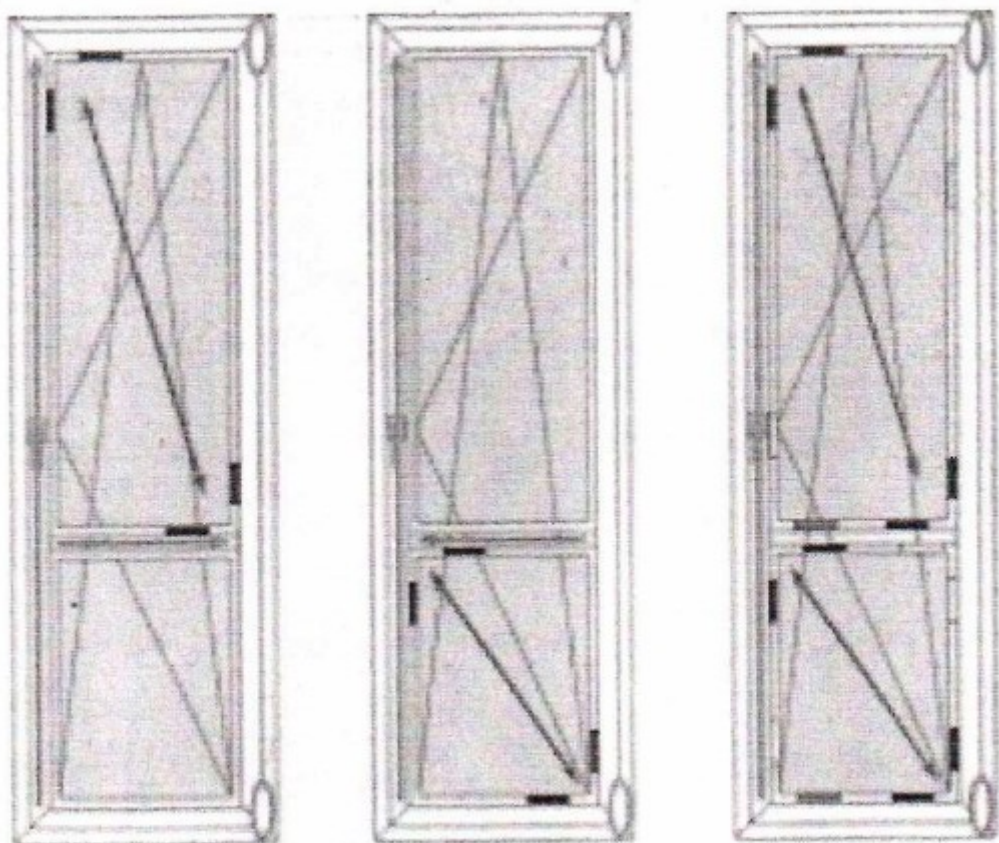

**Manufactuer reserves the right to make technical changes.**